

1977 Pacer P-14 (Morini Franco Motori Engine) Courtesy of Shelly/mopedgal **Engine Shutoff Switch** Single Wire/Case is grounded to handlebars **Brake Light Circuit Headlight Circuit** (Head, Tail & Speedo lamps + horn) Green sends volts to momentary switches on brake lever perches. When activated, power is then Black is feed from Mag sent to brake light through the blue wires Off Position Yellow sends power from (Grounds out the red wire to HT coil) headlight switch to tail light Run Position Speedometer Brown is from switch to horn (completes ground circuit when switch is 6V/1.2w Speedo lamp White goes from switch to headlight and speedometer bulb **Ignition Circuit** Gray wire from HT coil serves as the chassis ground for the tail/brake light assy. White Tail/Brake Light Assy 2 bulbs with common ground wire 6V/5W bulb-Taillight 6V/21w Headlamp 6V/10W bulb-Brake Light **Contact Point Assy Magneto** HT Coil **Ignition Coil** Horn **Assy** and Armature Condense Lighting and Horn Coil(s) and Armature Stator Base Plate This 6 volt CEV Magneto is internally grounded. The components are grounded to the stator base plate, engine and chassis. There is no separate ground wire coming out of the mageto Off Position There is only 3 wires that come out of the magneto: Headlight/Horn Black=Wire for the headlight, speedo light, horn and tail light. Switch Green=Wire for the stop light

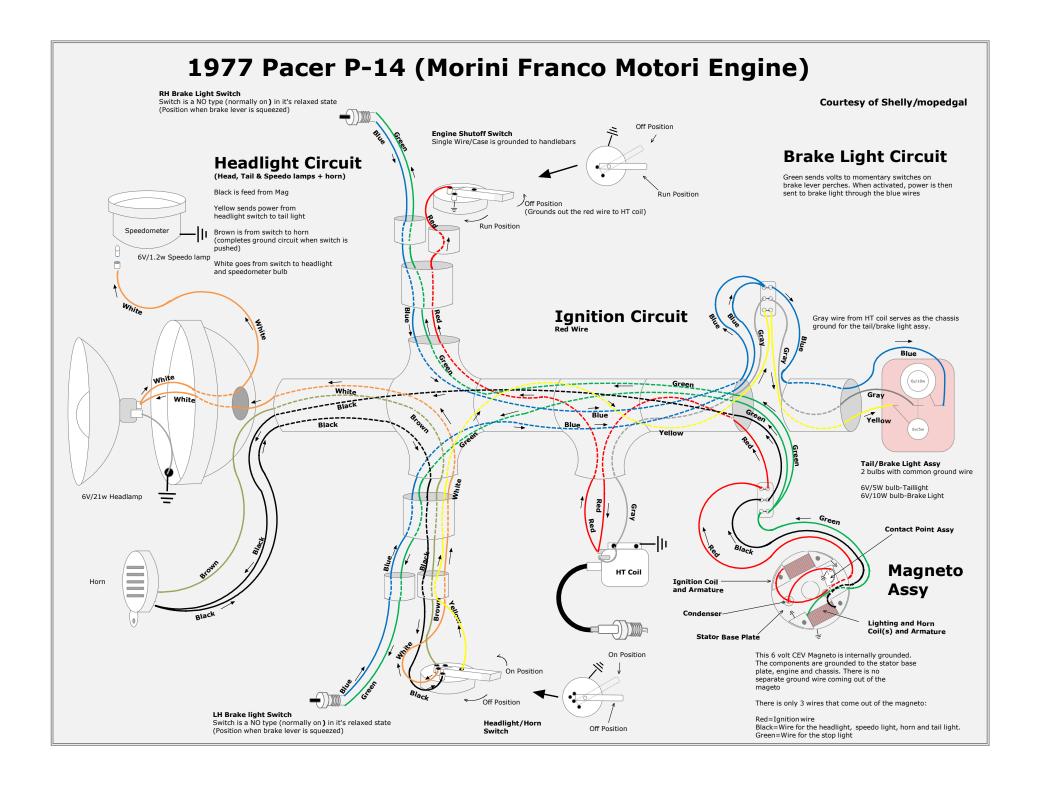



1977 Pacer P-14 (Morini Franco Motori Engine) Switch is a NO type (normally on) in it's relaxed state Courtesy of Shelly/mopedgal (Position when brake lever is squeezed) **Engine Shutoff Switch** Single Wire/Case is grounded to handlebars **Brake Light Circuit** Green sends volts to momentary switches on brake lever perches. When activated, power is then sent to brake light through the blue wires Off Position (Grounds out the red wire to HT coil) Run Position Speedometer 6V/1.2w Speedo lamp Gray wire from HT coil serves as the chassis ground for the tail/brake light assy. Tail/Brake Light Assy 2 bulbs with common ground wire 6V/5W bulb-Taillight 6V/21w Headlamp 6V/10W bulb-Brake Light Contact Point Assy **Magneto** HT Coil Horn **Ignition Coil Assy** and Armature Condense Lighting and Horn Coil(s) and Armature Stator Base Plate This 6 volt CEV Magneto is internally grounded. The components are grounded to the stator base plate, engine and chassis. There is no separate ground wire coming out of the mageto Off Position There is only 3 wires that come out of the magneto: LH Brake light Switch Switch is a NO type (normally on) in it's relaxed state Headlight/Horn Black=Wire for the headlight, speedo light, horn and tail light. (Position when brake lever is squeezed) Switch Green=Wire for the stop light

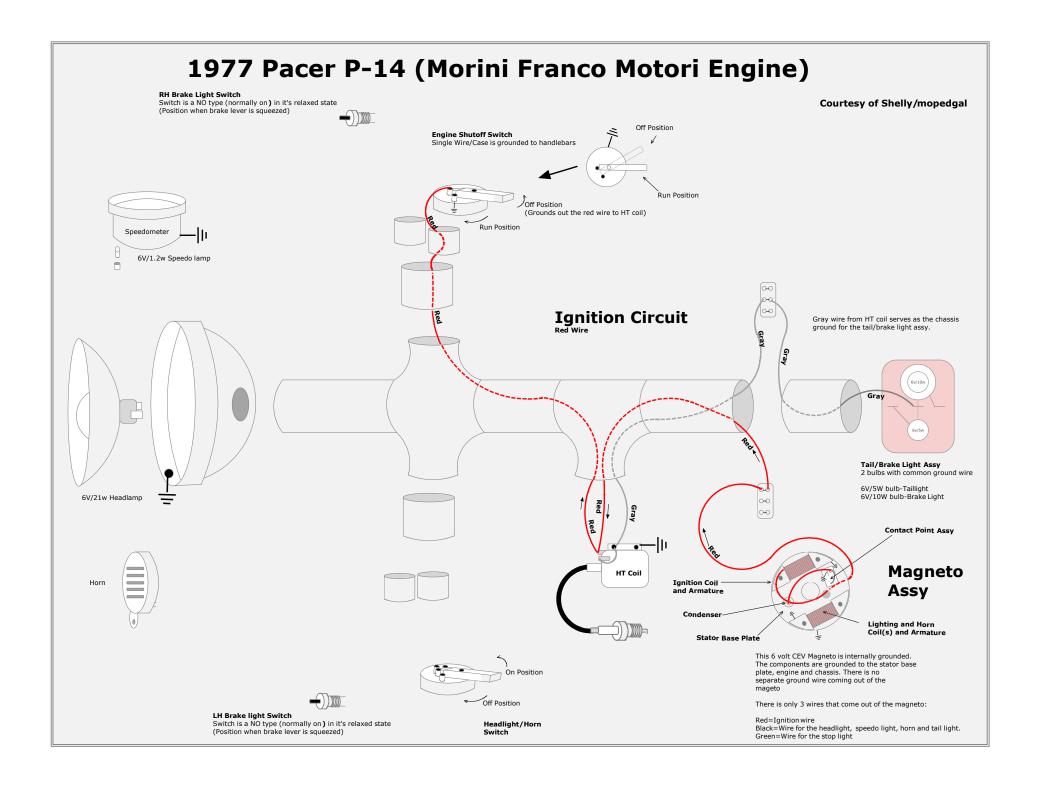